



Logitech®
X-530

Setup
Installation
Instalación

 
IMPORTANT SAFETY INFORMATION**CAUTION
ELECTRIC SHOCK HAZARD**

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Unplug the speakers from the computer and from the electrical outlet before cleaning them with a dry cloth.
- Install in accordance with the manufacturer's instructions.
- Place the speakers in a stable location so they will not fall causing damage to the speakers or bodily harm.
- Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.
- Do not block the openings in the speaker cabinets, never push objects into speaker vents or slots because of fire or electric shock hazards, and provide sufficient space around the speakers for proper ventilation.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Operate the speakers only from the low level audio line out jack of the computer or of an audio device.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- For added protection during lightning storms, unplug the speakers from the electrical outlet and turn off the computer.
- Unplug this apparatus when unused for long periods of time.
- Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug has been damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Refer all servicing to qualified service personnel.
- The speakers should be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the speakers from the AC mains receptacle.
- The socket-outlet shall be installed near the equipment and shall be readily accessible.
- Do not place any form of open flame source, such as lighted candles, on the apparatus.


WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Thank you for purchasing the X-530 speaker system from Logitech. Your X-530 speakers are easy to use and produce great sound. To discover more Logitech products, or if you have questions about your X-530 speakers, visit us on the web at www.logitech.com.

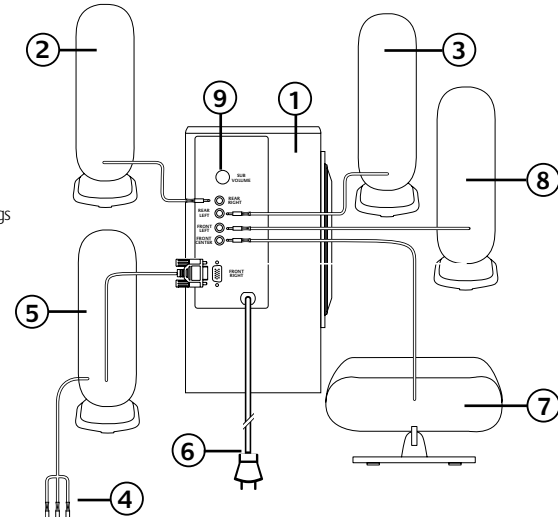

 - A. Headphone jack
- B. System volume knob
- C. Power light
- D. Power/standby button

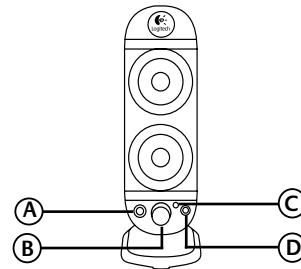

Setting up your Logitech® X-530 speakers

Important: For your safety, set up the system before plugging it into a power source.

1. Before attaching the cables to the subwoofer, position the two front satellite speakers on either side of your computer monitor about the same distance from each other as from you. Angle them to face you. The right front speaker is the control center for your system, so you will want to place it within easy reach. Place the rear left and right satellite speakers behind you and about the same distance apart as the front speakers. Position the front center channel speaker on top of your monitor or on your desk in between your monitor and keyboard. Depending on where you place your speakers, adjust the stand to direct the sound toward you.

For best sound quality, place the subwoofer on the floor beneath your desk. Be sure to maintain at least 6 inches of spacing around the subwoofer to allow for adequate ventilation.

2. Insert the colored plug from each satellite speaker into the corresponding colored jacks on the back of the subwoofer. Connect the d-sub plug from the front right speaker to the subwoofer as shown on the previous page. Carefully align the pins before inserting the plug, and screw down the connector.

3. A. If you have a PC and a:
 - 6, 7 or 8 channel (5.1, 6.1 or 7.1) sound card: Connect all 3 colored plugs from the audio input cable to the color-coded jacks on the sound card.

1. If jacks on your soundcard are not color coded, plug the audio input as follows:

- green to front L/R (or #1)
- black to rear L/R (or #2)
- orange to center / sub (or #3)

 
- 4-channel sound card: Connect the green plug from the audio input cable to your sound card's front jack and the black plug to your sound card's rear jack. Do not use the orange plug.
- 2-channel sound card: Connect the green plug from the audio input cable to the "line out" jack on your sound card. Do not use the black or orange plugs.

With a 2-channel sound card you will not hear sound from the rear speakers.

- B. If you have a video game console (PlayStation®, PlayStation®2, Xbox™, or GameCube®):

- Connect the green, black and orange plugs from the audio input cable to the 3 stereo mini jacks on the video game adapter.
- Connect the red and white RCA audio cables from your video game console to the RCA audio jacks to the video game adapter.

4. Plug the subwoofer's power cord into an electrical outlet.

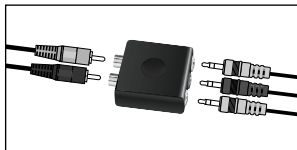

Enjoying your Logitech® X-530 speakers

Access these controls on the right front speaker:

Power/Standby

Toggles between power on and standby mode.

System Volume

Adjusts the overall system volume.

Headphone Jack

When headphones are used with your X-530 system, the speakers will mute automatically for private listening. Headphone volume is controlled by the soundcard on your computer.

Dolby® Digital

The X-530 speakers support Dolby® Digital sound on your PC if your 6-channel or greater sound card or DVD software can decode a Dolby® Digital soundtrack.

 
Subwoofer Volume

Located on the subwoofer. Use to adjust subwoofer volume (bass level).

Mounting your speakers to the wall

Your Logitech X-530 speaker satellites are wall mountable. Swivel the satellite base to desired position, and use the notch to hang your speaker on appropriate wall anchors.

Notch

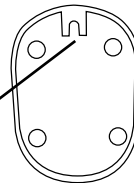

Specifications

- Total RMS Power: 70.1 Watts
 - Subwoofer: 25 watts RMS into 4 ohms at 100Hz at 10% THD clipping (total harmonic distortion)
 - Satellites: 45.1 watts RMS (2 x 7.4 w Front; 15.5 w Center; 2 x 7.4 w Rear) into 4 ohms at 1 kHz at 10% THD clipping (total harmonic distortion)
- Total Peak Power: 140 Watts at <10% THD
- System THD: Better than 0.07% THD before clipping
- Signal to noise ratio: >99 dB
- Frequency response: 40 Hz - 20 kHz
- Driver Size: 2" high excursion satellites, 5.25" high excursion subwoofer
- Speaker dimensions:
 - Satellites: (H) 8" x (W) 2.5" x (D) 3"
 - Center: (H) 2.5" x (W) 8" x (D) 3"
 - Subwoofer: (H) 11.5" x (W) 6" x (D) 9.25"

Limited Warranty

Logitech warrants that any hardware product accompanying this documentation shall be free from significant defects in material and workmanship for a period of two (2) years from the date of purchase. Logitech's limited warranty is nontransferable and is limited to the original purchaser. This warranty gives you specific legal rights, and you may also have other rights which vary under local laws.

Remedies. Logitech's entire liability and your exclusive remedy for any breach of warranty shall be, at Logitech's option, to: (a) repair or replace the hardware, provided that the hardware is returned to the point of purchase or such other place as Logitech may direct, with a copy of the sales receipt, or (b) refund the price paid. Any replacement hardware will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer. These remedies are void if failure of the hardware has resulted from accident, abuse, or misapplication.

DISCLAIMER OF WARRANTY. THE WARRANTIES EXPRESSLY SET FORTH IN THIS AGREEMENT REPLACE ALL OTHER WARRANTIES. LOGITECH AND ITS SUPPLIERS EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS WITH RESPECT TO THE HARDWARE. NO LOGITECH DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION, OR ADDITION TO THIS WARRANTY. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

LIMITATION OF LIABILITY. IN NO EVENT WILL LOGITECH OR ITS SUPPLIERS BE LIABLE FOR ANY COSTS OF PROCUREMENT OF SUBSTITUTE PRODUCTS OR SERVICES, LOST PROFITS, LOSS OF INFORMATION OR DATA, OR ANY OTHER SPECIAL, INDIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING IN ANY WAY OUT OF THE SALE OF, USE OF, OR INABILITY TO USE ANY LOGITECH PRODUCT OR SERVICE, EVEN IF LOGITECH HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO CASE SHALL LOGITECH'S AND ITS SUPPLIERS' TOTAL LIABILITY EXCEED THE ACTUAL MONEY PAID FOR THE LOGITECH PRODUCT OR SERVICE GIVING RISE TO THE LIABILITY. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The above limitations will not apply in case of personal injury where and to the extent that applicable law requires such liability.

CONSIGNES DE SÉCURITÉ IMPORTANTES



ATTENTION RISQUE D'ELECTROCUTION

- Veuillez lire ces instructions.
- Conservez ces instructions.
- Tenez compte de tous les avertissements.
- Suivez toutes les instructions.
- Débranchez les haut-parleurs de l'ordinateur et de la prise électrique avant de les nettoyer avec un chiffon sec.
- Procédez à l'installation en respectant les instructions du fabricant.
- Placez les haut-parleurs de manière à ce qu'ils soient stables, car toute chute risquerait de les endommager ou de causer des dommages corporels.
- N'utilisez pas les haut-parleurs à proximité d'une source d'eau et ne les mouillez pas.
- Ne bloquez pas les ouvertures des haut-parleurs. N'enfoncez jamais d'objets dans les ouvertures ou les fentes des haut-parleurs du fait du risque d'électrocution ou d'incendie et laissez un espace suffisant autour des haut-parleurs pour assurer une ventilation correcte.
- Ne les installez pas à proximité d'une source de chaleur, telle qu'un radiateur, un poêle ou tout autre appareil produisant de la chaleur (y compris les amplificateurs).
- Ne supprimez pas la fonction de sécurité de la fiche polarisée. Une fiche secteur polarisée possède deux broches dont l'une est plus large que l'autre. La broche la plus large est fournie pour votre sécurité. Si la fiche fournie n'est pas adaptée à votre prise, consultez un électricien pour la remplacer.
- Ne branchez les haut-parleurs que sur la prise de sortie audio de faible niveau de l'ordinateur ou d'un périphérique audio.
- Evitez de marcher sur le cordon d'alimentation ou de le pincer, en particulier au niveau des prises, des socles de prises d'alimentation et du point de sortie de l'appareil.
- N'utilisez que les éléments annexes et les accessoires spécifiés par le fabricant.
- Pour une meilleure protection contre la foudre, débranchez les haut-parleurs de la prise électrique et mettez l'ordinateur hors tension en cas d'orage.
- Débranchez cet appareil si vous ne l'utilisez pas pendant de longues périodes.
- L'appareil doit être réparé dès qu'il a été endommagé (par exemple, au niveau du cordon d'alimentation ou de la prise), ou si un liquide a été renversé sur l'appareil ou si des objets sont tombés dessus, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il est tombé.
- Les réparations doivent être effectuées par des techniciens qualifiés.
- Les haut-parleurs doivent être déconnectés de l'alimentation secteur en plaçant le commutateur d'alimentation/repos en position fermée et en débranchant leur cordon d'alimentation de la prise secteur.
- Vérifiez que l'équipement est installé à proximité d'une prise secteur non obstruée.
- Veuillez ne placer aucune flamme nue, telle qu'une bougie allumée, sur l'appareil.

ATTENTION:
POUR REDUIRE LE RISQUE DU FEU OU
D'ELECTROCUTION, N'EXPOSEZ PAS CET
APPAREIL A LA PLUIE ET A L'HUMIDITE.